The AP-OUT-MNT-V1A mount kit can be used for mounting an outdoor AP to a wall or pole.

Package Contents

Table 1: Package Contents

Item	Quantity
AP-OUT-MNT-V1A Mounting bracket	1
M6 x 20 screw	2
60 cm cable tie	1
6 inches hose clamp	2

Customer Supplied Equipment


- #1 Phillips screwdriver
- Electric drill with drill bits
- Anchor bolts, washers, and nuts

Mounting the AP to a Wall

To mount an access point to a wall, follow these steps:

- 1. Use the mounting bracket as a template, or the dimensions of the mounting bracket on the last page of the printed installation guide, to mark four mounting points on the wall.
- 2. Use a drill to make four holes on the four markings from the previous step.
- 3. Insert an anchor bolt (not included in the package) into each drilled hole.
- 4. Place the mounting bracket over the anchor bolts and press the bracket against the wall.
- 5. Place the washers and nut (not included in the package) onto the bolt's threaded end and tighten the nut until the mounting bracket is firmly attached to the wall.

Figure 1 Attaching the Mounting Bracket to a Wall

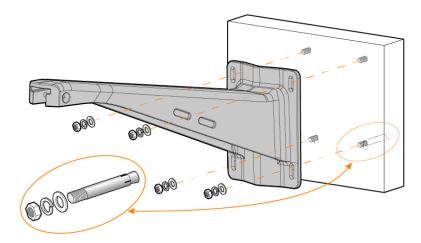

6. Slide the holder of the AP into the opening of the mounting holder and use the two M6 x 20 screws (included in the package) to attach the AP to the mounting bracket.

Figure 2 Attaching the AP to the Mounting Bracket


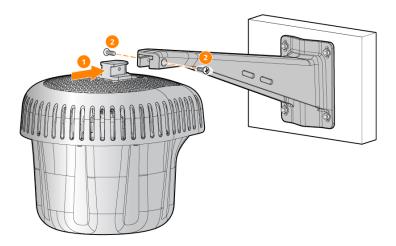


Figure 3 Attaching the AP to the Mounting Bracket (Completed)

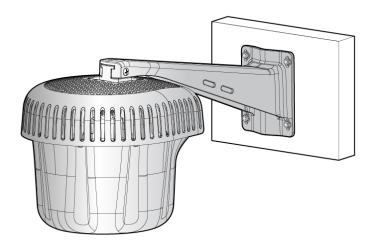

7. Use the cable tie to fasten the cables on the mounting bracket.

Mounting the AP to a Pole

To mount an access point to a pole, follow these steps:

- 1. Slide the two hose clamps through the two sets of slots on the mounting bracket.
- 2. Hold the mounting bracket against the pole, and tighten the hose clamps by using a screw driver to twist its screw head. The hose clamps included in the package support a pole with a diameter of 4 to 6 inch (100 to 150 mm).

Figure 4 Attaching the Mounting Bracket to a Round Pole


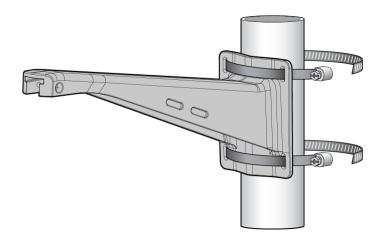


Figure 5 Attaching the Mounting Bracket to a Square Pole



3. Repeat step 6 to 7 in the Mounting the AP to a Wall section.

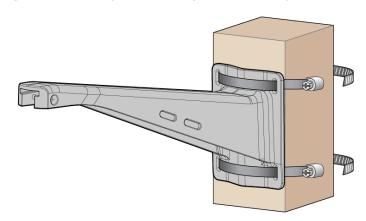